

# Installing GT Works

## 1.0 System Requirements

GT Works 3 is designed to be installed on a computer that meets or exceeds the following specifications. Please check whether your personal computer meets these requirements prior to the software installation.

### ■Operating Environment


Item	Contents
Personal computer main body	Windows® supported personal computer
CPU	Recommended 1GHz or more
Available hard disk capacity	For instration : 2GB or more recommended For execution : 512MB or more recommended
Disk drive	CD-ROM supported disk drive
Monitor	Resolution 1024 x 768 pixels or higher
OS (English version)	Microsoft®Windows®8.1 Enterprise (32-bit, 64-bit) Microsoft®Windows®8.1 Pro (32-bit, 64-bit) Microsoft®Windows®8.1 (32-bit, 64-bit) Microsoft®Windows®8 Enterprise (32-bit, 64-bit) Microsoft®Windows®8 Pro (32-bit, 64-bit) Microsoft®Windows®8 (32-bit, 64-bit) Microsoft® Windows®7 Ultimate (32-bit, 64-bit) Microsoft®Windows®7 Enterprise (32-bit, 64-bit) Microsoft®Windows®7 Professional (32-bit, 64-bit) Microsoft® Windows®7 Home Premium (32-bit, 64-bit) Microsoft® Windows®7 Starter (32-bit) Microsoft® Windows Vista® Enterprise (32-bit), Service Pack 1 or later Microsoft® Windows Vista® Ultimate (32-bit), Service Pack 1 or later Microsoft® Windows Vista® Business (32-bit), Service Pack 1 or later Microsoft® Windows Vista® Home Premium (32-bit), Service Pack 1 or later Microsoft® Windows Vista® Home Basic (32-bit), Service Pack 1 or later Microsoft® Windows® XP Professional (32-bit), Service Pack 2 or later Microsoft® Windows® XP Home Edition (32-bit), Service Pack 2 or later Microsoft® Windows® 2000 Professional, Service Pack 4 or later
Communication interface*1	USB port Ethernet port

\*1 : Required when Boot OS, projects, and others are transferred with directly connecting the GOT to the personal computer.

Note: Please refer Precautions on opposite page.

## 2.0 Installing GT Works 3

- 1) Restart Windows®, and do not start-up any other applications.
- 2) Insert the GT Works CD 1 into CD drive.
- 3) If the installation screen does not appear, Double click the "setup.exe" file in the "Disk 1" folder.
- 4) Following the on-screen instructions, select or enter the necessary information.

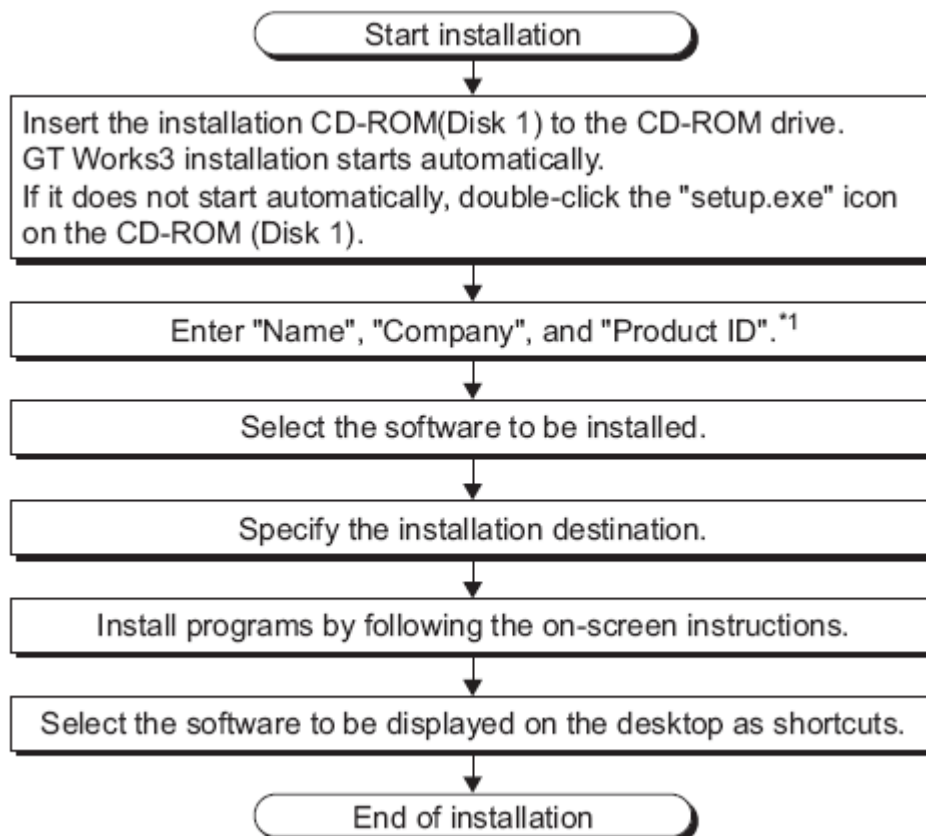

The Product ID is written on the "License certificate" included with the product. Enter the 12-digit number divided into 3 and 9 digits.

**Please Note:**

- Note that not to enter the power save mode (standby, hibernate, sleep) while installing the software.
- The driver install confirmation screen may appear during the software installation. When using Windows Vista® or Windows® 7 or later, select "Install this driver software". When using Windows® XP, click the Continue anyway button.
- If the cancel button is clicked during the installation, the installation is cancelled. In this case, insert the CD-ROM (Disk 1), and restart the installation by following the on-screen instructions.
- If a warning message from the security software is displayed, proceed the installation by following the on-screen instructions.

### 3.0 Installation of USB Driver

In order to communicate with a programmable controller CPU via USB, a USB driver needs to be installed.

For a USB driver installation procedure, refer to GT Works 3 Operating Manual.

**Precautions**

- The following functions cannot be used when the computer is running under Windows® 8.1, Windows® 8, Windows® 7, Windows Vista® or Windows® XP. This product may not perform properly, when these functions are used.
  - Activating the application with Windows® compatible mode.
  - Simplified user switch-over
  - Remote desktop
  - DPI setting other than 100% (For Windows Vista®, Windows® XP)
  - Setting the size other than [Smaller - 100%] for the characters and images on the screen (For Windows® 8.1, Windows® 8, Windows® 7)
  - Windows XP Mode (For Windows ®7)
  - Windows Touch (For Windows® 8.1, Windows® 8, Windows® 7)

- Modern UI style (For Windows® 8.1, Windows® 8)
  - Hyper-V (For Windows® 8.1 Enterprise, Windows® 8.1 Pro, Windows® 8 Enterprise, Windows® 8 Pro)
  - When installing this software, the administrator authority is required.
- When using Windows® 8.1, Windows®8, Windows®7, Windows Vista®, the standard user or administrator account is required.
- To interact GT Designer3 with other MELSOFT applications, use GT Designer3 under the administrator authority when the other MELSOFT applications are used under the administrator authority.

### **Acknowledgements**

- We do not guarantee those commercially available Microsoft® Windows® Operating System products that are introduced in this manual.
- This software's copyright is owned by Mitsubishi Electric Corporation.
- This product (including manual) can be used under the Software License Agreement only.
- We do not take any responsibilities for the consequences of operating this product (including manual).